



NUTS and BOLTS are assembled using LOCTITE thread-locking product 243

MAINTENANCE (According to MAINTENANCE PROGRAMM)

- (E) - Check the good condition of the anti run back bearing, item 22 :
 - Remove the motor to have access to the anti run back bearing
 - The anti run back bearing is free to rotate in one direction and blocked on the other direction.
 If any problem, change the anti run back bearing.

SPARE PARTS (Please indicate the cable reel reference number when ordering spare parts)

| | |
|------------------|---|
| 47C0005/3 | W motorcoupling with motor without brake - without free wheel |
| 47C0005/2 | W motorcoupling with brake motor |
| 47C0005/1 | W motorcoupling with motor without brake - with free wheel |
| Reference | Description |

SOUS-ENSEMBLES

| | | |
|-------------|------------------|--|
| → | 450N014 | Replacement kit for coupler W (joints, screws and bolts, key without motor - without free wheel) |
| 22 | 41A0486 | Free wheel adaptation |
| 20 | 4A10035 | Coupling hub |
| 1 | | Motor with brake 0,75 KW |
| 1 | | Motor without brake 0,75 KW |
| Item | Reference | Description |

NOTICE D'INFORMATION TECHNIQUE

TECHNICAL INFORMATION LEAFLET

DELACHAUX
CONDUCTIX®

« W » MOTORCOUPLING



440N059

Folio 1/2

07/06